SAMSUNG

HW-H600

User manual

Wireless Audio - SoundStand

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please register your product at
www.samsung.com/register

FEATURES

TV SoundConnect

TV SoundConnect lets you listen to audio from your TV on your SoundStand via a Bluetooth connection and lets you control the sound.

HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture.
The unit is also equipped with the ARC function which lets you listen to sound from your TV through the SoundStand via an HDMI cable.This function is only available if you connect the unit to an ARC compliant TV.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience. Surround Sound Expansion is powered by Sonic Emotion.

Special Sound Modes

You can select different sound modes - CINEMA / SPORTS / VOICE / MUSIC / STANDARD (OFF) - depending on the type of content you want to enjoy.

Multi-function Remote Control

You can use the supplied remote control to control various operations with the simple press of a button.

USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the SoundStand's USB HOST function.

Bluetooth Function

You can use connect a Bluetooth device to the SoundStand and enjoy music with high quality stereo sound, all without wires!

NFC

Connect your NFC compatible device via Bluetooth to the SoundStand using this simple set-up procedure and play music on the device through the SoundStand.

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.
	This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

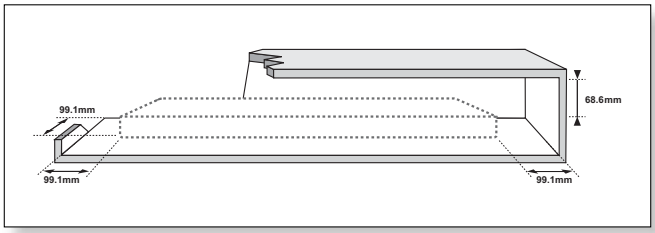

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation 7~10 cm. Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

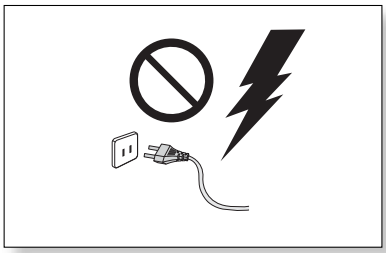

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

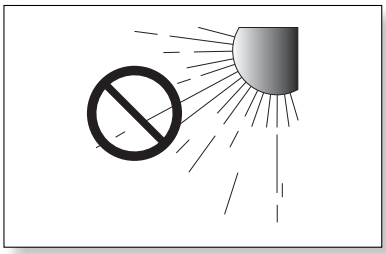

Do not expose the unit to direct sunlight or other heat sources.

This could lead to overheating and cause the unit to malfunction.

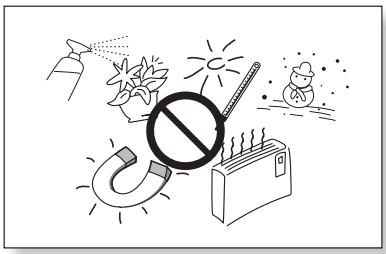

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only.

Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

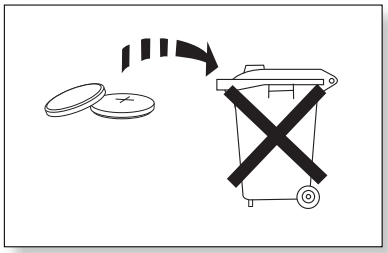

The batteries used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

Do not dispose of batteries in a fire.

Do not short circuit, disassemble, or overheat the batteries.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

CONTENTS

2 FEATURES

3 SAFETY INFORMATION

3 Safety warnings

4 Precautions

6 GETTING STARTED

6 Before reading the user's manual

6 What's included

7 DESCRIPTIONS

7 Top/front panel

8 Rear panel

9 REMOTE CONTROL

9 Tour and using the remote control

11 INSTALLATION

11 SoundStand installation

12 CONNECTIONS

12 Connecting an external device using an HDMI cable

13 Connecting an external device using OPTICAL (DIGITAL) cable or AUDIO (ANALOGUE) cable

14 FUNCTIONS

14 Input mode

14 ARC (HDMI OUT)

15 Bluetooth

17 NFC

18 TV SoundConnect

19 USB

20 Software upgrade

21 TROUBLESHOOTING

22 APPENDIX

22 Specifications

22 License

GETTING STARTED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be canceled.
	Note	Indicates tips or instructions on the page that help you operate a function.

► Safety Instructions and Troubleshooting

1) Be sure to familiarise yourself with the Safety Instructions before using this product. (See page 3)

2) If a problem occurs, check Troubleshooting. (See page 21)

► Copyright

©2014 Samsung Electronics Co.,Ltd.
All rights reserved; no part of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

WHAT'S INCLUDED

Check for the supplied accessories shown below.

Remote Control / Lithium Battery (3V : CR2032)



User Manual

AUX Cable

(Protection pad : 4ea)

Pad

Adapter

Power Cord

USB Cable

NFC Sticker

- The appearance of the accessories may differ slightly from the illustrations above.
- Use the dedicated USB cable to connect external USB devices to the unit.

DESCRIPTIONS

TOP/FRONT PANEL

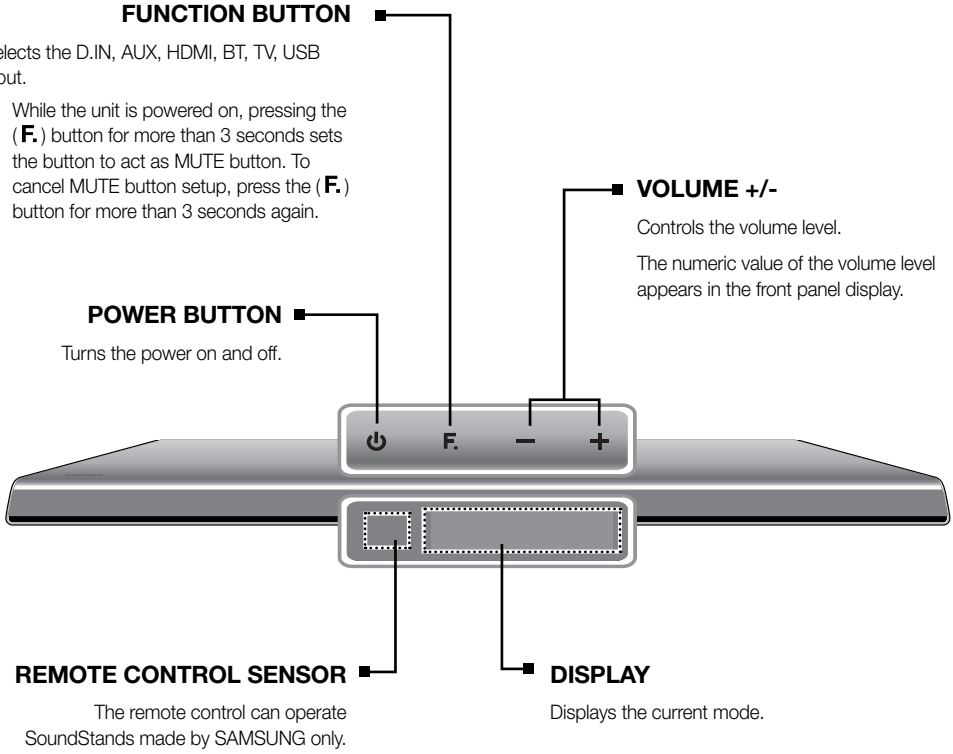
FUNCTION BUTTON
Selects the D.IN, AUX, HDMI, BT, TV, USB input.
While the unit is powered on, pressing the (F.) button for more than 3 seconds sets the button to act as MUTE button. To cancel MUTE button setup, press the (F.) button for more than 3 seconds again.
VOLUME +/-
Controls the volume level.
The numeric value of the volume level appears in the front panel display.
POWER BUTTON
Turns the power on and off.
F.
REMOTE CONTROL SENSOR
The remote control can operate SoundStands made by SAMSUNG only.
DISPLAY
Displays the current mode.

- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy the sound only from the SoundStand, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

REAR PANEL

OPTICAL IN

Connect to the digital (optical) output of an external device.

AUX IN

Connect to the Analogue output of an external device.

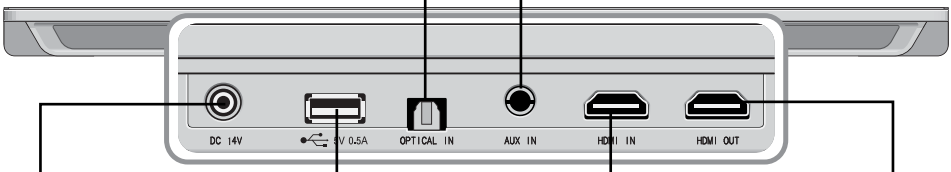

Power Supply IN

Connect the AC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

HDMI OUT Jack

Outputs digital video and audio signals simultaneously using an HDMI cable.

USB PORT

Connect USB devices such as MP3 players here to the play files on the devices.

HDMI IN Jack

Connects both video and audio signals using an HDMI cable.Use when connecting a supported external device.

- When disconnecting the power cable of the AC power adaptor from the wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

REMOTE CONTROL

ENG

TOUR AND USING THE REMOTE CONTROL

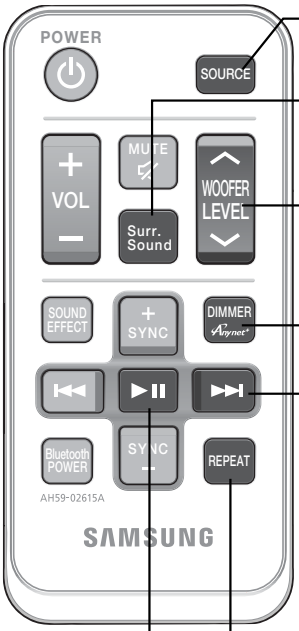

SOURCE

Press to select a source connected to the SoundStand.

Surr.Sound (Surround Sound Expansion)

Press the **Surr.Sound** button on the remote to control the adds depth and spaciousness to the sound.

SURROUND SOUND AUTO : If the sound source is more than 2 channels then SURROUND SOUND ON turns on automatically. On the other hand, if the sound source is less than 2 channels (STEREO), then mode is automatically set to SURROUND SOUND OFF.

WOOFER LEVEL

You can control the woofer volume.

Press ∧ or ∨ button on the **WOOFER LEVEL** button to increase or decrease the woofer volume. You can set it from SW -6 to SW +6.

DIMMER/ANYNET+

DIMMER : Press the **DIMMER/ANYNET+** button on the remote to control the brightness of the display.

ANYNET+ : Turns on the ANYNET+ function which lets the remote from your ANYNET+ Samsung TV control the SoundStand. The ANYNET+ function toggles on and off each time the **DIMMER/ ANYNET+** button is pressed and held for more than 5 seconds.

Skip Forward

If there is more than one file on the device you are playing, and you press the ▶▶I button, the next file is selected.

REPEAT

You can set the REPEAT function during music playback from a USB device.

REPEAT OFF : Cancels Repeat Playback.

REPEAT FILE : Repeatedly play a track.

REPEAT ALL : Repeatedly play all tracks.

REPEAT RANDOM : Plays tracks in random order. (A track that has already been played may be played again.)

Play/Pause

Press the ▶II button again to pause playing the file temporarily.
Press the ▶II button again to play the selected file.

- SoundStand is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

POWER

Turns the SoundStand on and off.

MUTE

You can turn the volume down to 0 with the push of a button. Press again to restore the sound to the previous volume level.

VOLUME

Adjusts the volume level of the unit.

SOUND EFFECT

Press **SOUND EFFECT** on the remote control to select a sound mode. Select the **STANDARD** mode if you want to enjoy the original sound. We recommend that you select a Sound Effect mode based on the source material and your personal taste.

Skip Back

If there is more than one file on the device you are playing, and you press the ⏮ button, the previous file is selected.

Bluetooth POWER

Press the **Bluetooth POWER** button on the remote to turn the Bluetooth Power function on and off.
See pages 16 and 18 for details.

AUDIO SYNC

If the SoundStand is connected to a digital TV and the video appears out of sync with the audio, press the Audio Sync buttons to sync the audio with the video.
Press the **AUDIO SYNC +/-** buttons to set the audio delay from 0 to 300 ms. In USB mode, TV mode, or BT mode, the Audio Sync function may not work.

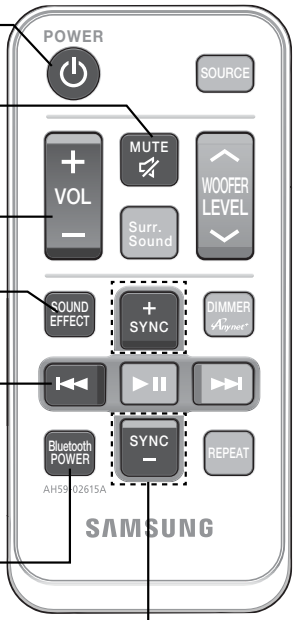

► Installing Batteries in the Remote Control

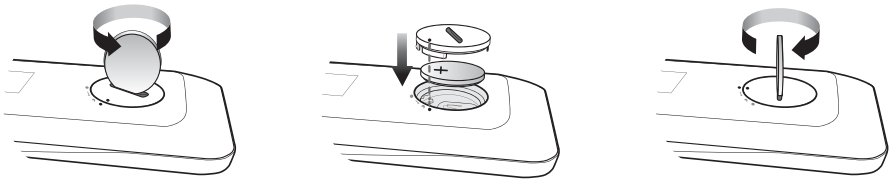

1. Use a coin to turn the remote control cover counterclockwise to remove it as shown in the figure above.
2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.
3. Use a coin to turn the cover clockwise as far as it will go to fix it in place.

INSTALLATION

SOUNDSTAND INSTALLATION

If you want to place your TV on top of the SoundStand, please make sure that your TV satisfies the two conditions below:

- Maximum TV weight : **35 kg**
- Maximum TV stand dimension : **Smaller than 720 mm X 320 mm**

※ Fits most TVs up to 1524mm and up to 35kg (*TV screen size and stand type may vary)

► How to install the SoundStand

	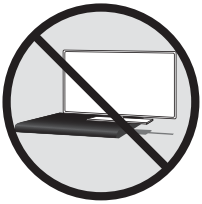
Correct installation	**Do not place the TV to one side on the SoundStand**
	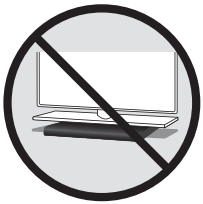
Do not place the SoundStand near the edge of a TV shelf, table, or entertainment center.	**Do not place a TV whose base is bigger than the SoundStand's top surface on the SoundStand.**

- Do not place the TV to one side on the SoundStand. The TV may tip over and may cause physical injury.
- Make sure to place the SoundStand in the center of the shelf, table, etc., when you install it. Do not place it near an edge.
- If the TV is bigger than the SoundStand, consider a wall-mounted TV installation or place the SoundStand on a stable surface.
- Keep the SoundStand at least 5 cm away from the wall when you install it.

► Using the protection pads

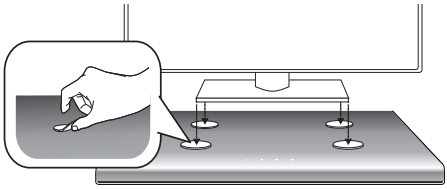

Place the included protective pads on top of the product and then place the TV stand on top of them to prevent scratches on the product's surface.

CONNECTIONS

CONNECTING AN EXTERNAL DEVICE USING AN HDMI CABLE

HDMI is the standard digital interface for connecting to such devices as a TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.

HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

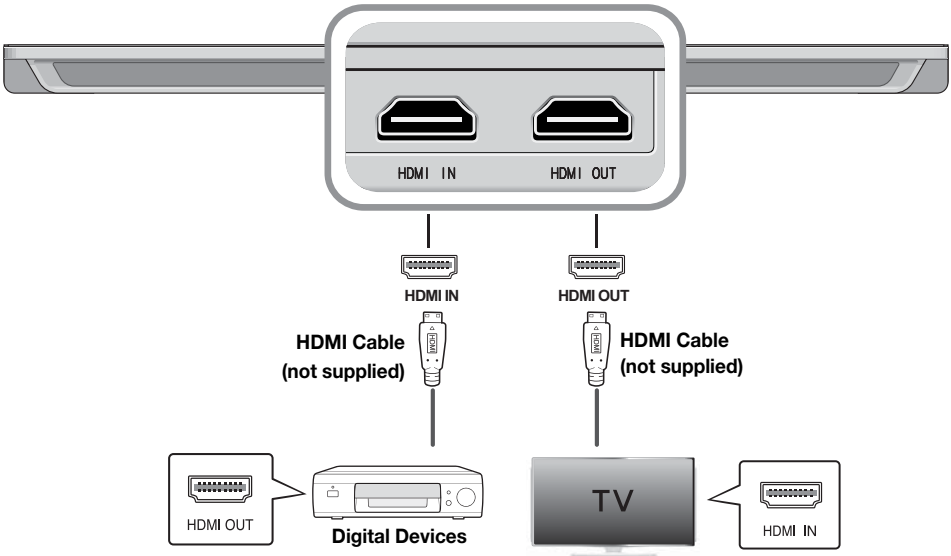

HDMI IN

Connect an HDMI cable (not supplied) from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.

and,

HDMI OUT (HDMI)

Connect an HDMI cable (not supplied) from the **HDMI OUT** jack on the back of the product to the HDMI IN jack on your TV.

- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.

HDMI OUT (ARC)

The ARC function allows digital audio to output via the **HDMI OUT**(ARC) port.

It can be enabled only when the SoundStand is connected to a TV that supports the ARC function

- ANYNET+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

CONNECTING AN EXTERNAL DEVICE USING OPTICAL (DIGITAL) CABLE OR AUDIO (ANALOGUE) CABLE

This unit comes equipped with one optical in digital jack and one audio analogue in jack, giving you two ways to connect it to a TV.

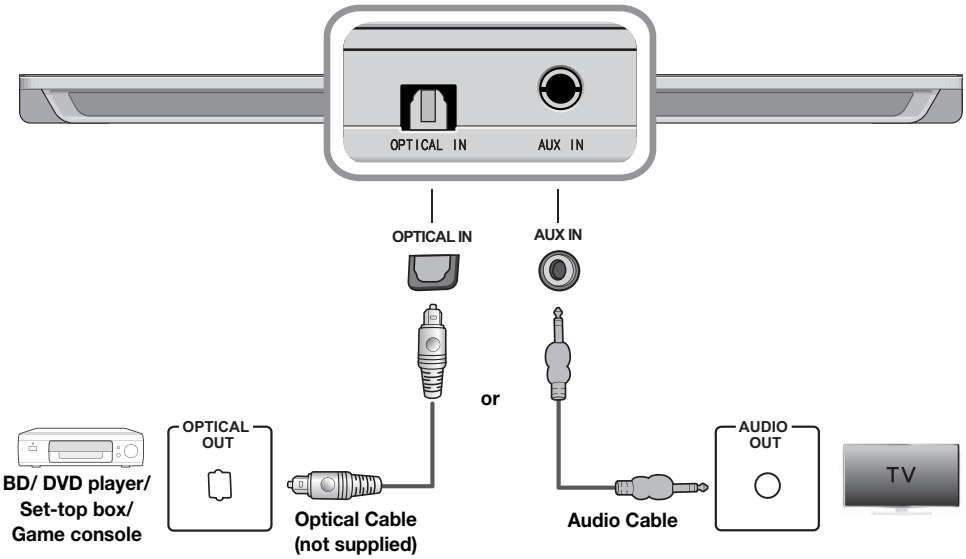

OPTICAL IN

Connect **OPTICAL IN** on the main unit to the OPTICAL OUT of the TV or Source Device.

- Do not connect the power cord of this product or your TV to the wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord

or,

AUX IN

Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT of the TV or Source Device.
Be sure to match connector colours.

FUNCTIONS

INPUT MODE

Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel to select the mode you want.

Input mode	Display
Optical Digital input	**D.IN**
AUX input	**AUX**
HDMI input	**HDMI**
BLUETOOTH mode	**BT**
TV mode	**TV**
USB mode	**USB**

The unit turns off automatically in the following situations.

- D.IN/HDMI/BT/TV/USB/ARC Mode
  - If there is no audio signal for 25 minutes.
- AUX Mode
  - If the AUX cable is disconnected for 25 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected. To turn this function ON or OFF, press and hold the ►II button for 5 seconds. AUTO POWER DOWN ON / OFF appears on the display.

ARC (HDMI OUT)

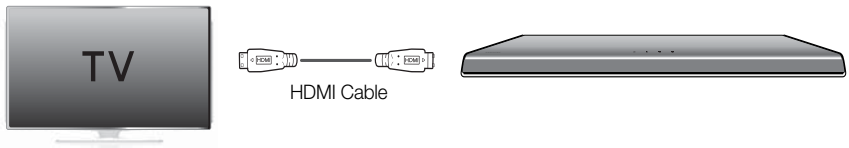

- The ARC function allows digital audio to output via the HDMI OUT (ARC) port.
  It can be enabled only when the SoundStand is connected to a TV that supports the ARC function.
- ANYNET+ must be turned on.

- This function is not available if the HDMI cable does not support ARC.
- The ARC function is activated in D.IN mode if you have connected the unit to a TV that supports ARC.
- To turn off the ARC function, turn ANYNET+ off.

BLUETOOTH

You can use a Bluetooth device to enjoy music with high quality stereo sound, all without wires!

► To connect the SoundStand to a Bluetooth device

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

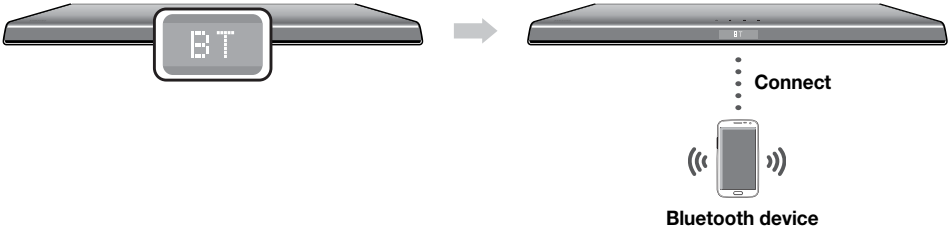

1. Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel to display the **BT** message.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select the Stereo headset menu on the Bluetooth device.
   - You will see a list of scanned devices.
4. Select **"[Samsung] SoundStand"** from the list.
   - When the SoundStand is connected to the Bluetooth device, it will display [Bluetooth device name] → **BT** on the front display.
   - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
   - If the Bluetooth device has failed to pair with the SoundStand, delete the previous "**[Samsung] SoundStand**" found by the Bluetooth device and have it search for the SoundStand again.
5. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the SoundStand.
   - In BT mode, the Play/Pause/Next/Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.

- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- Bluetooth connection will be terminated when you turn the SoundStand off.
- The SoundStand may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the SoundStand.
  - If several Bluetooth devices are simultaneously paired with SoundStand.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The SoundStand supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the SoundStand to a Bluetooth device that supports only the HF (Hands Free) function.

► Bluetooth POWER on (Bluetooth POWER)

When the Bluetooth Power On function is on and the SoundStand is turned off, if a previously paired Bluetooth device tries to pair with the SoundStand, the SoundStand turns on automatically.

1. Press the **Bluetooth POWER** button on the SoundStand remote control.
2. Bluetooth POWER on appears on the SoundStand's display.

- Available only if the SoundStand is listed among the Bluetooth device's paired devices. (The Bluetooth device and the SoundStand must have been previously paired at least once.)
- SoundStand will appear in the Bluetooth device's searched devices list only when the SoundStand is displaying [BT READY].
- In the TV SoundConnect mode, the SoundStand cannot be paired to another Bluetooth device.
- If the SoundStand is connected to a TV through TV SoundConnect, and you turn the the SoundStand off by turning off the TV, the Bluetooth Power function will not turn the SoundStand on.

► To disconnect the Bluetooth device from the SoundStand

You can disconnect the Bluetooth device from the SoundStand. For instructions, see the Bluetooth device's user manual.

- The SoundStand will be disconnected.
- When the SoundStand is disconnected from the Bluetooth device, the SoundStand will display **BT DISCONNECTED** on the front display.

► To disconnect the SoundStand from the Bluetooth device

Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel to switch from **BT** to another mode or turn off the SoundStand.

- The connected Bluetooth device will wait a certain amount of time for a response from the SoundStand before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the SoundStand and the Bluetooth device exceeds 5m.
- If the Bluetooth device comes back into the effective range after disconnecting, you can restart the SoundStand to restore the pairing with the Bluetooth device.
- The SoundStand automatically turns off after 25 minutes in the Ready state.

More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the SoundStand.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the SoundStand with the Bluetooth device while they are close together.
- The further the distance between the SoundStand and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception-sensitivity areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

NFC

You can connect your SoundStand to an NFC-enabled smart device through a Bluetooth connection with a simple setup. Once connected, you can enjoy music stored in your smart device through the SoundStand.

► Connecting with NFC and smart devices

Attach the NFC sticker label on a desired and then approach your smart device to the NFC label.

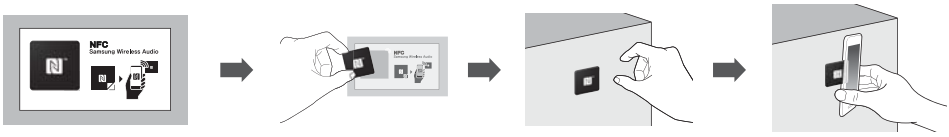

► Connecting with NFC

1. Detach the NFC sticker label and attach it to a desired spot.
   - Putting the NFC sticker within a 3m radius from the unit is recommanded.
2. Enable the NFC function of your smart device.
3. Bring your smart device's NFC antenna close to the NFC label.
4. When the connection prompt appears on your smart device's display, select **<Yes>**.
   - Once the connection is established, the completion message appears.

► Disconnecting NFC

Bring your smart device's NFC antenna close to the NFC label on the SoundStand again. The disconnection message appears on the smart device's display.

► To connect another smart device to the SoundStand which is already connected to another NFC compatible device

After disconnecting from the previously connected device, bring the new smart device close to the NFC label of the SoundStand.

- The NFC function is implemented in Android v4.1.2 Jelly Bean and later operating systems.
  - To make NFC connections, your smart device needs both Android OS 4.1.2 Jelly Bean or later and the NFC tag for NFC function execution. You also need to download the "Samsung NFC Connection" application from the Google Playstore and install it on your smart device. For further details, please refer to the smart device's user manual.
- The location of the NFC antenna is different in different devices. Confirm the location of your smart device's antenna in the device's user manual before attempting to pair it with the SoundStand.
- If your smart device is in a thick housing or case, the NFC connection may not be stable.
- The N-mark is a trade mark or registered trade mark of the NFC Forum Inc. in the United States and other countries.
- If you have trouble with an NFC connection
  - Actually touching your smart device to the NFC label can cause NFC connection failure.
  - If the "Empty tag" error is displayed on the smart device, please try again.
  - Check whether your smart device's antenna is close enough to the NFC logo on the SoundStand.
- If you turn off the SoundStand when the Bluetooth Power On feature is ON, and then try to connect a Bluetooth device that has been previously connected using NFC, the SoundStand will turn on automatically when the device connects.
  To set the Bluetooth Power On option, see page 16.

TV SOUNDCONNECT

You can enjoy TV sound through your SoundStand connected to a Samsung TV that supports TV SoundConnect function.

► Connecting a TV to the SoundStand



1. Turn on the TV and SoundStand.
   - Set the "Add New Device" menu of the TV to "On".
2. Press the (**F.**) button on the main unit's top panel or the **SOURCE** button on the remote control to select the TV mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function. "[Samsung] SoundStand" is displayed on the TV screen.
4. Select **<Yes>** to finish connecting the TV and SoundStand.

- Switching the SoundStand's mode from TV to another automatically terminates TV SoundConnect.
- To connect the SoundStand to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, then press the ►II button on the remote control for 5 seconds to connect to another TV.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.)
- If your Samsung TV is released before 2014, check the SoundShare setting menu.
- If the distance between the TV and SoundStand exceeds 5m, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or SoundStand so that they are within operational range, and then re-establish the TV SoundConnect connection.

- TV SoundConnect Operational Range
  - Recommended pairing range: within 50 cm
  - Recommended operational range: within 5 m
- PLAY, NEXT, PREV and STOP buttons are not operable in TV SoundConnect mode.

► Using the Bluetooth POWER On function

After the TV and the SoundStand have been connected using TV SoundConnect, if you set the Bluetooth Power On function on, the SoundStand will turn on and off automatically when you turn the TV on or off.

1. Connect the TV with your SoundStand using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the SoundStand remote. "BLUETOOTH POWER ON" appears on the SoundStand's display.
   - BLUETOOTH POWER ON : The SoundStand turns on and off when you turn the TV on or off.
   - BLUETOOTH POWER OFF : The SoundStand only turns off when you turn the TV off.

- This function is supported only by some Samsung TVs released from 2013 on.
- If the SoundStand is connected to a TV through TV SoundConnect, and you turn the SoundStand off by turning off the TV, the Bluetooth Power function will not turn the SoundStand on, even if you connect another Bluetooth device to it.

USB

You can play music files located on USB storage devices.

USB port

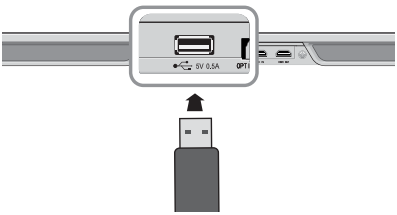

Display

1. Connect the USB device to the USB port on the back of the product.
2. Press the **SOURCE** button on the remote control or the (**F.**) button on the product's top panel repeatedly until **USB** appears.
3. **USB** appears on the display screen.
   - The SoundStand connection to the USB device is complete.
   - The SoundStand automatically turns off (Auto Power Off) if no USB device has been connected for more than 25 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file or folder on a USB device exceeds 10 characters, it is not displayed on the SoundStand's display.
- This product may not be compatible with certain types of USB storage media.
- The SoundStand supports the FAT16 and FAT32 file systems.
  - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is being read.
- DRM-protected music files (MP3, WMA) from a commercial web site cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

Format	Codec
***.mp3**	MPEG 1 Layer2
	MPEG 1 Layer3
	MPEG 2 Layer3
	MPEG 2.5 Layer3
***.wma**	Wave_Format_MSAudio1
	Wave_Format_MSAudio2
***.aac**	AAC
	AAC-LC
	HE-AAC
***.wav**	-
***.ogg**	OGG 1.1.0
***.flac**	FLAC 1.1.0, FLAC 1.2.1

※ Supported Sampling Rate above 16KHz

SOFTWARE UPGRADE

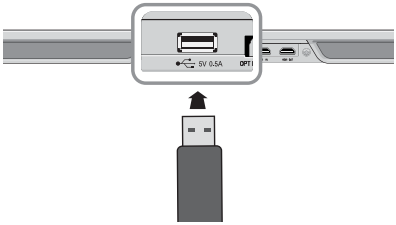

Samsung may offer upgrades for the SoundStand's system firmware in the future.

If an upgrade is offered, you can upgrade the firmware by connecting a USB device with the firmware upgrade stored on it to the USB port on your SoundStand.

Note that if there are multiple upgrade files, you must load them onto the USB device singly and use them to upgrade the firmware one at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading upgrades files.

- Insert a USB device containing the firmware upgrade into the USB port on the main unit.
- Do not disconnect the power or remove the USB device while upgrades are being applied. The main unit will turn off automatically after completing the firmware upgrade.
  When software is upgraded, all settings are reset to their factory default settings.
  We recommend you write down your settings so that you can easily reset them after the upgrade.
- Once the software upgrade is completed, turn off the product and then press and hold the (▶II) button for a while to reset the product.
- If the firmware fails to upgrade, we recommend formatting the USB device in FAT16 and trying again.
- Do not format the USB device in the NTFS format. The SoundStand does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.

A function does not work when the button is pressed.	
• Is there static electricity in the aerial?	→ Disconnect the power plug and connect it again.

Sound is not produced.	
• Is the Mute function on?	→ Press the Mute button to cancel the function.
• Is the volume set to minimum?	→ Adjust the volume .

The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.

The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released after 2012. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung call centre.
• Reset the TV MODE and connect again.	→ Press and hold the ►II button for 5 seconds to reset the TV SoundConnect connection.

APPENDIX

SPECIFICATIONS

Model name	HW-H600

GENERAL	USB	5V/0.5A
	Weight	5 kg
	Dimensions (W x H x D)	735 x 36.5 x 360 mm
	Operating temperature range	+5°C ~ +35°C
	Operating humidity range	10 % to 75 %
AMPLIFIER	Rated output power	80 W(MID/TWT = 8 OHM, SW = 4 OHM) THD = 10 %, 1 kHz
	S/N ratio (analogue input)	65 dB
	Separation (1kHz)	65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

LICENSE

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

dts 2.0 Channel

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

ENERGY STAR PARTNER

As an ENERGY STAR Partner, Samsung has determined that this product or product models meets the ENERGY STAR guidelines for energy efficiency.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
INDONESIA	0800112888 021-56997777	www.samsung.com/id/support
JAPAN	0120-327-527	www.samsung.com/jp/support
MALAYSIA	1800-88-9999	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG (726-7864)	www.samsung.com/sg/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG (726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	www.samsung.com/Levant/support (English)
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
Ghana	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	www.samsung.com/africa_fr/support
SENEGAL	800-00-0077	
CAMEROON	7095- 0077	
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

SAMSUNG

HW-H600

دليل المستخدم

Wireless Audio - SoundStand

تخيل الإمكانيات

نشكرك على شراء هذا المنتج من منتجات سامسونج.
للحصول على مجموعة الخدمات الكاملة، يرجى تسجيل المنتج الخاص بك على
www.samsung.com/register

الميزات

TV SoundConnect

تتيح لك وظيفة TV SoundConnect الاستماع إلى الصوت من التلفزيون على SoundStand عبر اتصال Bluetooth، كما يسمح لك بالتحكم في الصوت.

HDMI

ينقل منفذ HDMI إشارات الصوت والصورة في نفس الوقت، ويوفر صورة أكثر وضوحًا.
كما أن الوحدة مجهزة بوظيفة ARC والتي تتيح لك إمكانية الاستماع إلى الصوت من التلفزيون من خلال كبل HDMI عبر SoundStand بكبل HDMI.
وتتوافر تلك الوظيفة فقط في حالة قيامك بتوصيل الوحدة بجهاز تلفزيون متوافق مع وظيفة ARC.

Surround Sound Expansion (تمديد الصوت المحيطي)

تضيف ميزة تمديد الصوت المحيطي العمق والوضوح لتجربة الاستماع الخاصة بك. ميزة تمديد الصوت المحيطي مدعومة من قبل شركة Sonic Emotion.

وضع الصوت الخاص

يمكنك تحديد أوضاع الصوت المختلفة – CINEMA (سينما) / SPORTS (رياضة) / VOICE (صوت) / MUSIC (موسيقى) / STANDARD(OFF) (قياسي (إيقاف)) – وفقًا لنوع المحتوى التي تريد مشاهدته.

وحدة التحكم عن بعد المتعددة الوظائف

يمكن استخدام وحدة التحكم عن بعد للتحكم في العديد من العمليات باستخدام أزرار التحكم.

دعم (USB Host)

يمكنك توصيل وتشغيل ملفات الموسيقى من وحدات تخزين (USB) الخارجية مثل مشغلات (MP3)، ووحدات الذاكرة الوميضة (USB flash memory)، إلخ. باستخدام وظيفة (SoundStand's USB HOST).

وظيفة البلوتوث

يمكنك توصيل جهاز بلوتوث بجهاز SoundStand والاستمتاع بسماع الموسيقى بصوت استريو عالي الجودة، بدون توصيلات سلكية!

وظيفة NFC

قم بتوصيل جهازك المتوافق مع وظيفة NFC عبر البلوتوث بجهاز SoundStand باستخدام خطوة الإعداد البسيط وقم بتشغيل الموسيقى على الجهاز من خلال SoundStand.

معلومات السلامة

تحذيرات السلامة

لتقليل مخاطر التعرض لصدمة كهربية، لا تقم بإزالة الغطاء (أو الغطاء الخلفي).
فلا توجد أجزاء يمكن للمستخدم صيانتها بالداخل. وإنما يُرجى ترك عملية الصيانة لموظفي الصيانة المؤهلين.

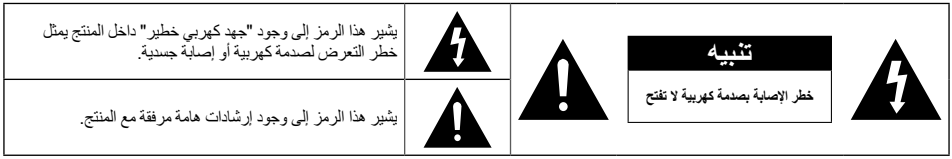
تنبيه
خطر الإصابة بصدمة كهربية لا تفتح
يشير هذا الرمز إلى وجود "جهد كهربي خطير" داخل المنتج يمثل خطر التعرض لصدمة كهربية أو إصابة جسدية.
يشير هذا الرمز إلى وجود إرشادات هامة مرفقة مع المنتج.

تحذير : للحد من خطر نشوب الحريق أو التعرض لصدمة كهربية، لا تعرض هذا الجهاز للأمطار أو الرطوبة.

تنبيه : للحيلولة دون وقوع الصدمات الكهربية، قم بمطابقة الشفرة العريضة للقابس مع الفتحة العريضة ثم أحكم إدخالها.

- ينبغي أن يكون هذا الجهاز متصلاً دومًا بمأخذ التيار المتردد مع وجود وصلة أرض واقية.
- لفصل الجهاز عن التيار الكهربي الرئيسي، يجب سحب القابس من مقبس التيار الكَهربي الرئيسي ولذا ينبغي أن يكون قابس التيار الكهربي الرئيسي جاهزًا للتشغيل.

تنبيه

- لا تُعرض هذا الجهاز لقطرات السوائل أو تناثرها. لا تضع أشياء مليئة بالسوائل، كأنية الزهور على الجهاز.
- لإيقاف تشغيل هذا الجهاز تمامًا، يجب سحب قابس التيار الكهربي من المقبس الجداري. ولهذا، يجب أن يكون الوصول إلى قابس التيار الكهربي سهلًا ومتاحًا دائمًا.

الاحتياطات

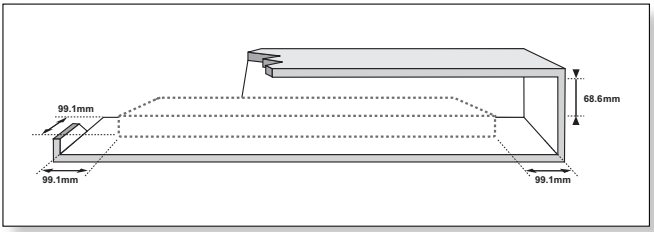

تأكد من توافق مصدر التيار المتردد الموجود في منزلك مع متطلبات الطاقة الموضحة على ملصق التعريف الموجود على ظهر المنتج. قم بتركيب المنتج بشكل أفقي، على سطح مناسب (أثاث)، مع ترك مساحة كافية حوله لتوفير التهوية 7 إلى 10 سنتيمترات. تأكد من عدم تغطية فتحات التهوية. لا تضع الوحدة على المكبرات أو غيرها من الأجهزة التي ربما ترتفع درجة حرارتها تم تصميم هذه الوحدة للاستخدام بشكل مستمر. لإيقاف تشغيل الوحدة بشكل كامل، افصل قابس التيار المتردد من منفذ التيار الكهربي الموجود بالحائط. افصل التيار الكهربي عن الوحدة في حالة الرغبة في عدم استخدامها لفترة طويلة.

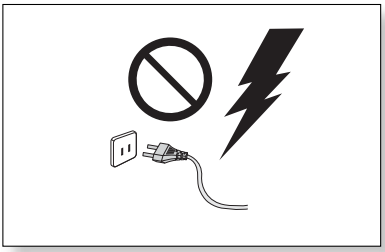

عند هبوب العواصف الرعدية، افصل قابس التيار المتردد من منفذ الكهرباء الموجود بالحائط. من الممكن أن يؤدي ارتفاع الجهد الكهربي إلى إتلاف الوحدة.

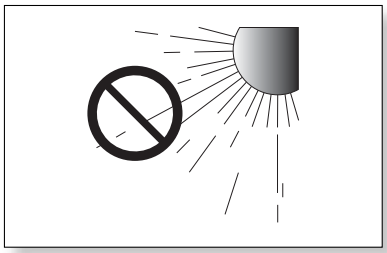

لا تعرض الوحدة إلى ضوء الشمس المباشر أو غير ذلك من مصادر الحرارة. من الممكن أن يؤدي ذلك إلى زيادة درجة الحرارة بشكل كبير مما قد يتسبب في تعطل الوحدة.

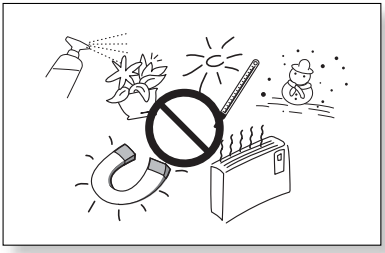

وفر الحماية للمنتج من الرطوبة (أنية الزهور)، والحرارة الزائدة (المدفأة) أو المعدات التي تصدر مجالات مغناطيسية أو كهربية قوية. افصل كبل التيار الكهربي من مصدر التيار المتردد في حالة تعطل الجهاز. المنتجالخاص بك غير مصمم للاستخدام الصناعي. يتم استخدام هذا المنتج للأغراض الشخصية فقط.

من الممكن أن يحدث تكاثف في حالة تخزين المنتج في درجات حرارة منخفضة. في حالة نقل الوحدة خلال فصل الشتاء، انتظر لمدة ساعتين تقريبًاحتى تصل درجة حرارة الوحدة إلى درجة حرارة الغرفة قبل الاستخدام.

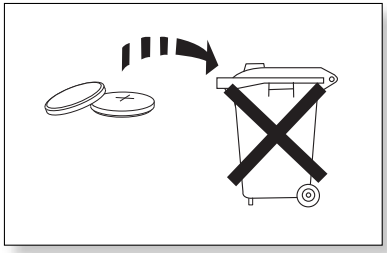

تحتوي البطاريات المستخدمة مع هذا المنتج على مواد كيميائية مضرة بالبيئة. لا تتخلص من البطاريات بإلقائها في سلة المهملات المنزلية العادية. يحظر التخلص من البطاريات عن طريق حرقها. لا تعرض البطاريات لدوائر قصر أو الفك أو الحرارة الزائدة. هناك احتمال بحدوث انفجار إذا تم استبدال البطارية بطريقة غير صحيحة. قم باستبدالها ببطاريات من نفس النوع أو من نوع مماثل.

ARA

المحتويات

٢ الميزات

٣ معلومات السلامة

٣ تحذيرات السلامة

٤ الاحتياطات

٦ بدء التشغيل

٦ قبل قراءة دليل المستخدم

٦ المكونات المرفقة

٧ الوصف

٧ اللوحة العلوية / الأمامية

٨ اللوحة الخلفية

٩ وحدة التحكم عن بُعد

٩ التعرف على وحدة التحكم عن بعد واستخدامها

١١ التركيب

١١ تركيب نظام SoundStand

١٢ التوصيلات

١٢ توصيل جهاز خارجي باستخدام كبل HDMI

١٣ توصيل جهاز خارجي باستخدام كبل بصري (رقمي) أو كبل صوت (تناظري)

١٤ الوظائف

١٤ وضع الإدخال

١٤ (HDMI OUT) ARC

١٥ البلوتوث

١٧ NFC

١٨ TV SoundConnect

١٩ USB

٢٠ تحديث برامج التشغيل

٢١ استكشاف الأعطال وإصلاحها

٢٢ الملحق

٢٢ المواصفات

٢٢ الترخيص

بدء التشغيل

قبل قراءة دليل المستخدم

لاحظ المصطلحات التالية قبل قراءة دليل المستخدم.

◄ الرموز المستخدمة في هذا الدليل

الرمز	المصطلح	التعريف
	تنبيه	يشير إلى أن الوظيفة لا تعمل أو احتمال إلغاء الإعدادات.
	ملاحظة	تشير إلى التعليمات أو التلميحات على الصفحة التي تساعدك على تشغيل الوظيفة.

◄ تعليمات السلامة واستكشاف الأعطال وإصلاحها

١) تأكد من الاطلاع على تعليمات السلامة قبل استخدام المنتج. (راجع صفحة ٣)

٢) في حالة حدوث مشكلة، راجع قسم استكشاف الأعطال وإصلاحها. (راجع صفحة ٢١)

◄ حقوق الطبع والنشر

حقوق الطبع والنشر لعام 2014 محفوظة لشركة سامسونج إلكترونيكس المحدودة.
كافة الحقوق محفوظة؛ لا يجوز إعادة إصدار أو نسخ هذا الدليل أو أي جزء منه دون إذن كتابي مسبق من شركة سامسونج إلكترونيكس المحدودة.

المكونات المرفقة

راجع الملحقات المرفقة الموضحة أدناه.

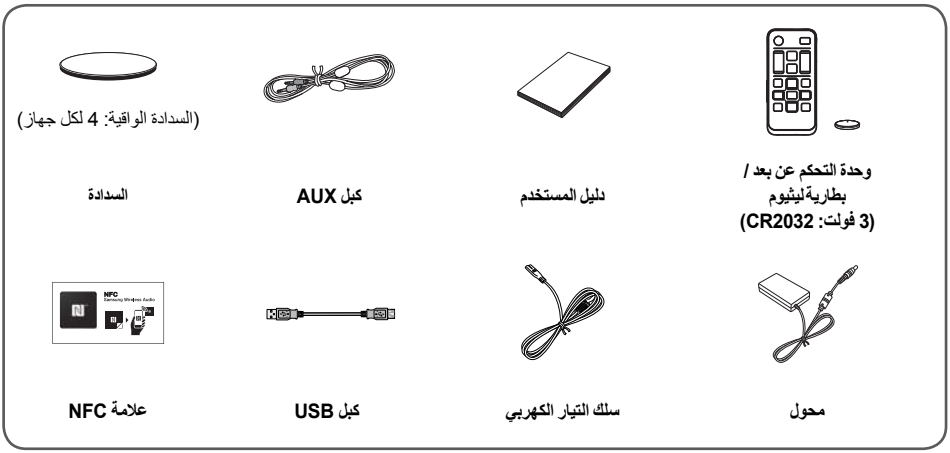

- ربما يختلف شكل الملحقات قليلاً عن الصور الموضحة أعلاه.
- استخدم كبل USB المخصص لتوصيل أجهزة USB الخارجية بالوحدة.

ARA

الوصف

اللوحة العلوية / الأمامية

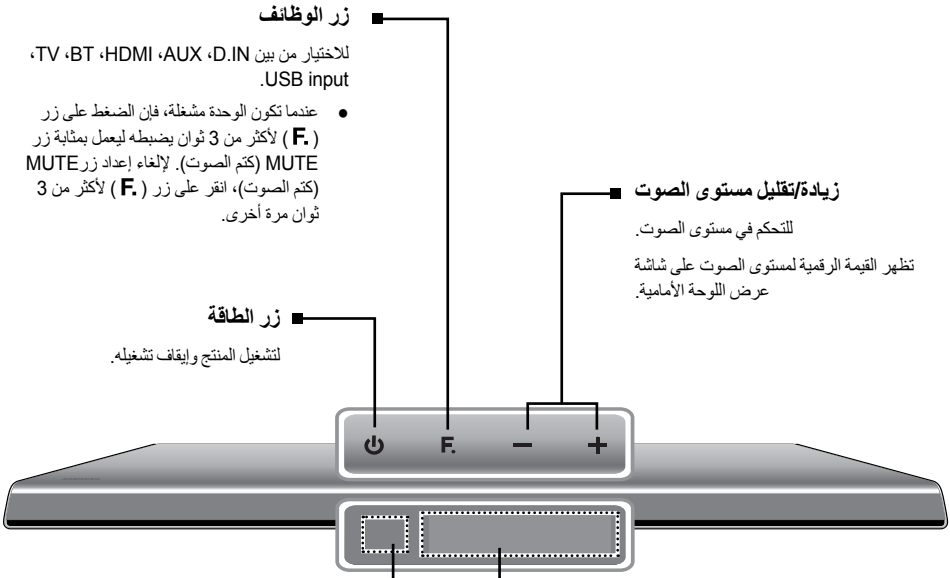

زر الوظائف

للاختيار من بين D.IN، AUX، HDMI، BT، TV، USB input.

- عندما تكون الوحدة مشغلة، فإن الضغط على زر (**F.**) لأكثر من 3 ثوان يضبطه ليعمل بمثابة زر MUTE (كتم الصوت). لإلغاء إعداد زرMUTE (كتم الصوت)، انقر على زر (**F.**) لأكثر من 3 ثوان مرة أخرى.

زيادة/تقليل مستوى الصوت

للتحكم في مستوى الصوت.

تظهر القيمة الرقمية لمستوى الصوت على شاشة عرض اللوحة الأمامية.

زر الطاقة

لتشغيل المنتج وإيقاف تشغيله.

مستشعر وحدة التحكم عن بُعد

تقوم وحدة التحكم عن بعد بتشغيل أنظمة SoundStand من إنتاج سامسونج فقط.

الشاشة

تعرض الوضع الحالي.

- عندما تقوم بتشغيل هذه الوحدة، سيكون هناك فترة تأخير لمدة 4 إلى 5 ثوان قبل صدور الصوت.
- إذا أردت الاستمتاع بالصوت فقط من جهاز SoundStand، فيجب عليك إيقاف تشغيل سماعات التلفزيون من قائمة Audio Setup (إعداد الصوت) الخاصة بالتلفزيون. ارجع إلى دليل المالك المرفق مع التلفزيون الخاص بك.

اللوحة الخلفية

OPTICAL IN

وصل بالمخرج الرقمي (البصري) الخاص بالجهاز الخارجي.

AUX IN

وصل بالمخرج التناظري الخاص بالجهاز الخارجي.

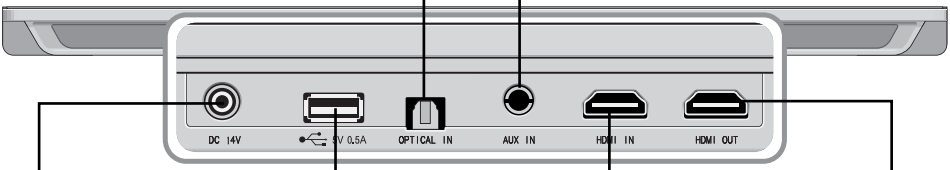

Power Supply (مصدر الطاقة) مدخل

وصل مقبس محول التيار المتردد بمدخل مصدر الطاقة بشكل صحيح، ثم وصل قابس محول التيار المتردد بمنفذ الطاقة الموجود بالحائط.

مقبس HDMI OUT

يصدر إشارات الصورة والصوت الرقمية في نفس الوقت باستخدام كبل HDMI.

منفذ USB

قم بتوصيل أجهزة USB مثل مشغلات MP3 هنا لتشغيل الملفات على الأجهزة.

مقبس HDMI IN

يوصل كل من إشارتي الفيديو والصوت باستخدام كبل HDMI. استخدمه عند توصيل جهاز خارجي مدعوم.

- عند فصل كبل التيار الكهربي من محول التيار الكهربي من منفذ التيار الكهربي الموجود بالحائط، أمسك الكبل من المقبس. تجنب سحب الكبل.
- لا تقم بتوصيل هذه الوحدة أو غيرها من المكونات بمخرج التيار المتردد حتى تنتهي من توصيل كافة التوصيلات بين المكونات.

ARA

وحدة التحكم عن بُعد

التعرف على وحدة التحكم عن بعد واستخدامها

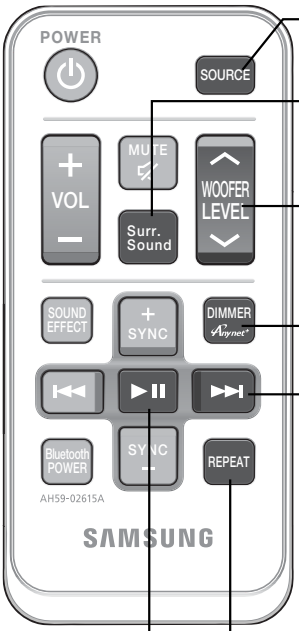

SOURCE

اضغط عليه لتحديد مصدر متصل بجهاز SoundStand.

Surr.Sound (تمديد الصوت المحيطي)

اضغط على زر **Surr.Sound** الموجود على وحدة التحكم عن بعد لإضافة العمق والقوة للصوت.

SURROUND SOUND AUTO : إذا كان مصدر الصوت يزيد عن قناتين سيتم تشغيل وظيفة SURROUND SOUND ON تلقائيًا. ومن ناحية أخرى، إذا كان مصدر الصوت أقل من قناتين STEREO، يتم ضبط الوضع تلقائيًا على SURROUND SOUND OFF.

WOOFER

يمكنك التحكم في مستوى صوت مضخم الصوت.

اضغط على زر ∧ أو ∨ الموجود بمفتاح **WOOFER LEVEL** إذا كنت ترغب في رفع أو خفض مستوى صوت المضخم. يمكنك ضبط القيمة من SW -6 إلى SW +6.

DIMMER/ANYNET+

DIMMER : اضغط على زر **DIMMER/ANYNET+** الموجود على لوحة التحكم عن بعد للتحكم في مستوى سطوع الشاشة.

ANYNET+ : يشغل وظيفة ANYNET+ التي تسمح بالتحكم في نظام SoundStand من خلال وحدة التحكم عن بعد الخاصة بتلفزيون Samsung. ويمكن تشغيل وظيفة ANYNET+ وإيقاف تشغيلها في كل مرة يتم فيها الضغط على زر **DIMMER/ANYNET+** بشكل مستمر لمدة تزيد عن 5 ثواني.

التخطي للأمام

في حالة وجود أكثر من ملف على الجهاز تقوم بتشغيله، وقيامك بالضغط على زر ▶▶|، يتم تحديد الملف التالي.

REPEAT

يمكنك ضبط وظيفة REPEAT (الإعادة) أثناء إعادة تشغيل الموسيقى من محرك USB.

REPEAT OFF : لإلغاء تشغيل وظيفة Repeat (الإعادة).

REPEAT FILE : تشغيل مسار بشكل متكرر.

REPEAT ALL : تشغيل كافة المسارات بشكل متكرر.

REPEAT RANDOM : تشغيل الملفات بترتيب عشوائي.
(المسار الذي تم تشغيله بالفعل ربما يتم تشغيله مرة أخرى.)

التشغيل/الإيقاف المؤقت

اضغط على زر ▶II مرة أخرى لإيقاف تشغيل الملف بشكل مؤقت.
اضغط على زر ▶II لتشغيل الملف المحدد.

- اسم SoundStand هو ملك خاص لشركة Samsung.
- شغل التلفزيون باستخدام وحدة التحكم عن بعد الخاصة بالتلفزيون.

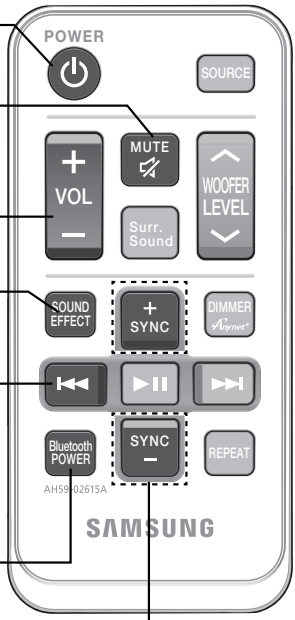

POWER

لتشغيل وإيقاف تشغيل نظام SoundStand.

MUTE

يمكنك تخفيض الصوت إلى مستوى عن طريق الضغط على الزر. اضغط مرة أخرى لاستعادة الصوت بالمستوى السابق.

VOLUME

لضبط مستوى صوت الوحدة.

SOUND EFFECT

اضغط على **SOUND EFFECT** على وحدة التحكم عن بُعد لتحديد وضع صوت.
اختر وضع **STANDARD** إذا كنت ترغب في الاستمتاع بالصوت الأصلي. نوصيك باختيار Sound Effect (المؤثرات الصوتية) وفقًا للمادة المصدر وذوقك الشخصي.

التخطي للخلف

في حالة وجود أكثر من ملف على الجهاز تقوم بتشغيله، وقيامك بالضغط على زر ⏮، يتم تحديد الملف السابق.

Bluetooth POWER

اضغط على زري **Bluetooth POWER** على وحدة التحكم عن بُعد لتعيين تشغيل وظيفة Bluetooth Power (تشغيل Bluetooth) أو إيقاف تشغيلها.
راجع صفحة ١٦ و١٨

AUDIO SYNC

إذا كان جهاز SoundStand متصلاً بتلفزيون رقمي وبدا الفيديو غير متزامن مع الصوت، فاضغط على زري Audio Sync (مزامنة الصوت) لمزامنة الصوت مع الفيديو.
اضغط على زري **AUDIO SYNC +/-** لتعيين تأخير الصوت من 0 إلى 300 ملي ثانية. في وضع USB، وضع TV أو وضع BT، ربما لا تعمل وظيفة Audio Sync (مزامنة الصوت).

◄ تركيب البطاريات في وحدة التحكم عن بعد

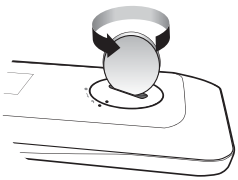

١. استخدم عملة معدنية لإدارة غطاء وحدة التحكم عن بعد في عكس اتجاه حركة عقارب الساعة لإزالته على النحو الموضح في الشكل أعلاه.

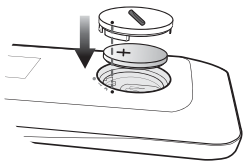

٢. ركّب بطارية ليثيوم بجهد 3 فولت. اجعل القطب الموجب (+) متجهًا لأعلى عند تركيب البطارية. عد تركيب غطاء البطارية مع محاذاة علامات '●' على النحو الموضح في الشكل أعلاه.

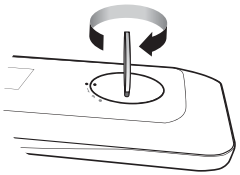

٣. استخدم عملة معدنية لإدارة الغطاء في اتجاه حركة عقارب الساعة حتى يثبت في مكانه.

ARA

التركيب

تركيب نظام SOUNDSTAND

إذا كنت ترغب في وضع التلفزيون فوق نظام SoundStand، يرجى التأكد من أن تلفزيونك يفي بالشرطين التاليين:

- الحد الأقصى لوزن التلفزيون: **٣٥ كجم**
- الحد الأقصى لأبعاد حامل التلفزيون: **أصغر من ٧٢٠ ملم × ٣٢٠ ملم**

※ يناسب معظم أجهزة التلفزيون حتى ١٥٢٤ مم ,حتى وزن ٣٥ كجم (*قد يختلف حجم شاشة التلفزيون ونوع حاملها)

◄ كيفية تركيب نظام SoundStand

التركيب السليم	**لا تضع التلفزيون على جانب واحد من نظام SoundStand**
	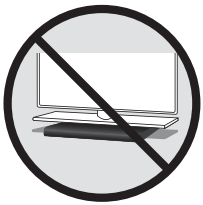
لا تضع SoundStand بالقرب من حافة رف التلفزيون أو الطاولة أو مركز الترفيه	**لا تضع جهاز تلفزيون تكون قاعدته أكبر من السطح العلوي لنظام SoundStand على نظام SoundStand**

- لا تضع التلفزيون على جانب واحد من نظام SoundStand. فقد ينقلب التلفزيون ويتسبب في حدوث إصابة بدنية.
- تأكد من وضع نظام SoundStand في منتصف الرف أو الطاولة، إلخ.، عند تثبيته. ولا تضعه بالقرب من حافة.
- إذا كان التلفزيون أكبر من نظام SoundStand، فقم بتثبيت التلفزيون على الحائط أو ضعه على سطح ثابت.
- حافظ على بُعد نظام SoundStand عن الحائط بمسافة بوصتين (٥ سم) على الأقل عند تثبيته.

◄ استخدام وسائد الحماية

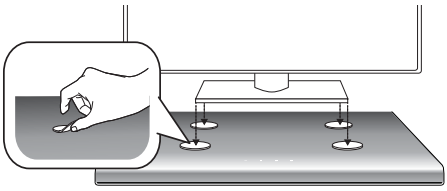	ضع وسائد الحماية المضمنة أعلى المنتج ثم ضع حامل التلفزيون أعلى منها لتجنب خدش سطح المنتج.

التوصيلات

توصيل جهاز خارجي باستخدام كبل HDMI

يعد HDMI الواجهة الرقمية القياسية للتوصيل بتلك الأجهزة مثل أجهزة التلفزيون، أجهزة العرض، مشغلات DVD، مشغلات Blu-ray، وأجهزة الاستقبال الرقمي set top boxes، وغيرها.

تحول وصلات HDMI دون حدوث فقدان للإشارة والذي ينتج عادة عند تحويل الإشارة إلى إشارة تناظرية ويحافظ على جودة الصوت والفيديو للمصدر الرقمي الأصلي.

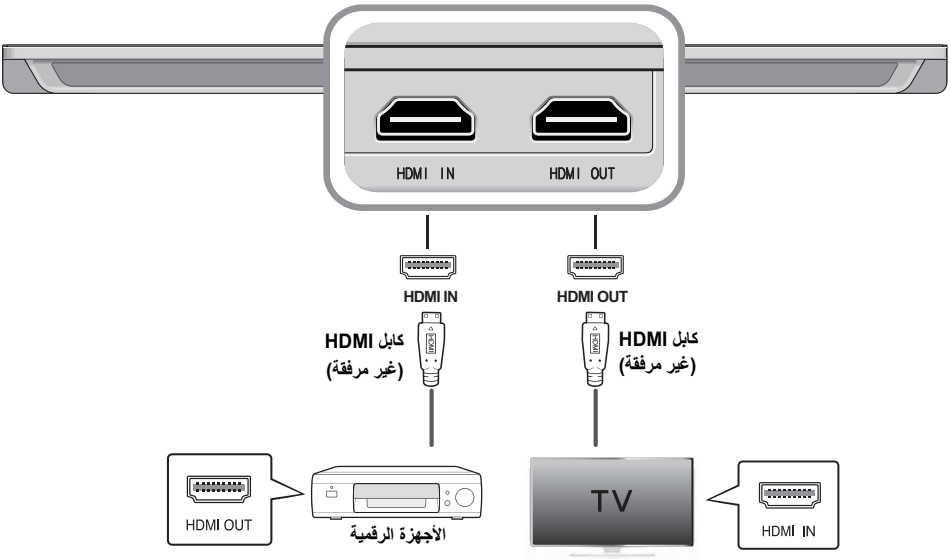

HDMI IN

قم بتوصيل كبل HDMI (غير مرفقة) من مقبس **HDMI IN** الموجود بالجزء الخلفي من المنتج بمقبس HDMI OUT الموجود بأجهزتك الرقمية.

و،

(HDMI) HDMI OUT

وصل كابل HDMI (غير مرفق) من مقبس **HDMI OUT** الموجود بالجزء الخلفي من المنتج بمقبسHDMI IN الموجود بالتلفزيون.

- يعد HDMI هو الوسيط الذي يتيح إمكانية الإرسال الرقمي لبيانات الصورة والصوت بموصل واحد فقط.

(ARC) HDMI OUT

تتيح وظيفة ARC إمكانية إخراج الصوت الرقمي من خلال منفذ **HDMI OUT** (ARC).

لا يمكن تشغيل تلك الوظيفة إلا في حالة توصيل نظام SoundStand بجهاز التلفزيون الذي يدعم وظيفة ARC.

- يجب تشغيل وظيفة +ANYNET.
- لن تكون هذه الوظيفة متاحة إذا كان كبل HDMI لا يدعم ARC.

ARA

توصيل جهاز خارجي باستخدام كبل بصري (رقمي) أو كبل صوت (تناظري)

تأتي هذه الوحدة مزودة بمقبس optical in رقمي واحد ومقبس analogue in للصوت مما يوفر لك طريقتين للتوصيل بالتلفزيون.

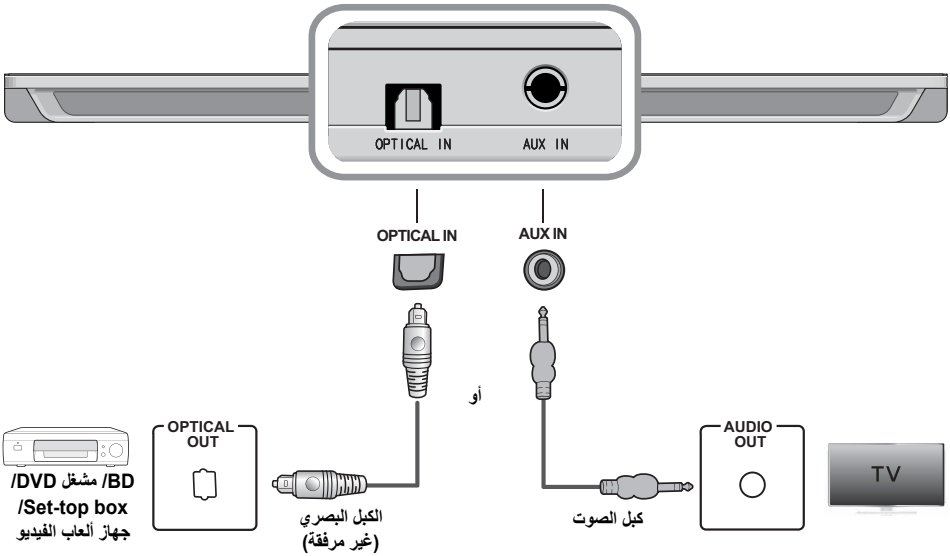

OPTICAL IN

وصل مقبس **OPTICAL IN** الموجود بالوحدة الرئيسية بمنفذ OPTICAL OUT بالتلفزيون أو الجهاز المصدر.

- لا تقم بتوصيل سلك التيار الكهربي الخاص بهذا المنتج أو جهاز التلفزيون بمنفذ التيار الكهربي الموجود بالحائط حتى إتمام كافة التوصيلات بين المكونات.
- قبل نقل هذا المنتج أو تركيبه، تأكد من إيقاف تشغيله وفصل سلك التيار الكهربي.

أو،

AUX IN

وصل مقبس **AUX IN** (الصوت) الموجود بالوحدة الرئيسية بمنفذ AUDIO OUT بالتلفزيون أو الجهاز المصدر.
تأكد من مطابقة ألوان الموصلات.

الوظائف

وضع الإدخال

اضغط على زر **SOURCE** الموجود على وحدة التحكم عن بعد أو زر (**F.**) الموجود على اللوحة العلوية من المنتج لتحديد الوضع المرغوب.

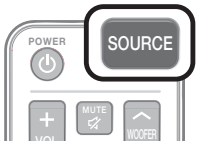

وضع الإدخال	الشاشة
المدخل الرقمي البصري	**D.IN**
مدخل AUX	**AUX**
مدخل HDMI	**HDMI**
وضع BLUETOOTH	**BT**
وضع TV	**TV**
وضع USB	**USB**

يتم إيقاف تشغيل الوحدة تلقائيًا في الحالات التالية:

- وضع ARC/USB/TV/BT/HDMI/D.IN
  - في حالة عدم صدور إشارة صوتية لمدة 25 دقيقة.
- وضع AUX
  - إذا لم كابل AUX متصلاً لمدة ٢٥ دقيقة.
  - في حالة عدم الضغط على أي مفتاح لمدة ٨ ساعات أثناء توصيل كبل AUX. لتشغيل هذه الوظيفة أو إيقاف تشغيلها، اضغط مع الاستمرار على زر ▶II لمدة ٥ ثوان. يظهر AUTO POWER DOWN ON / OFF (تشغيل/إيقاف التشغيل التلقائي) على الشاشة.

(HDMI OUT) ARC

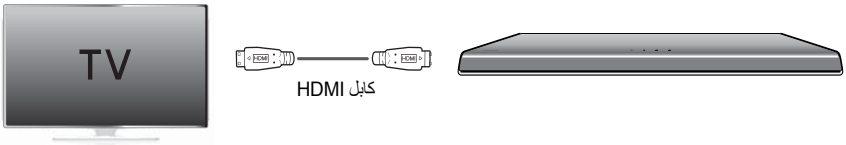

كابل HDMI

- تتيح وظيفة ARC إمكانية إخراج الصوت الرقمي من خلال منفذ HDMI OUT (ARC).
  لا يمكن تشغيل تلك الوظيفة إلا في حالة توصيل نظام SoundStand بجهاز التلفزيون الذي يدعم وظيفة ARC.
- يجب تشغيل وظيفة +ANYNET.

- لن تكون هذه الوظيفة متاحة إذا كان كبل HDMI لا يدعم ARC.
- يتم تفعيل وظيفة ARC في وضع D.IN في حالة توصيل الوحدة بجهاز تلفزيون يدعم وظيفة ARC.
- لإيقاف تشغيل وظيفة ARC، قم بإيقاف تشغيل وظيفة +ANYNET.

ARA

البلوتوث

يمكنك استخدام جهاز بلوتوث للاستمتاع بسماع الموسيقى بصوت استريو عالي الجودة، بدون توصيلات سلكية!

◄ لتوصيل نظام SoundStand بجهاز بلوتوث

تأكد من أن جهاز البلوتوث يدعم تشغيل سماعة الاستريو المتوافقة مع البلوتوث.

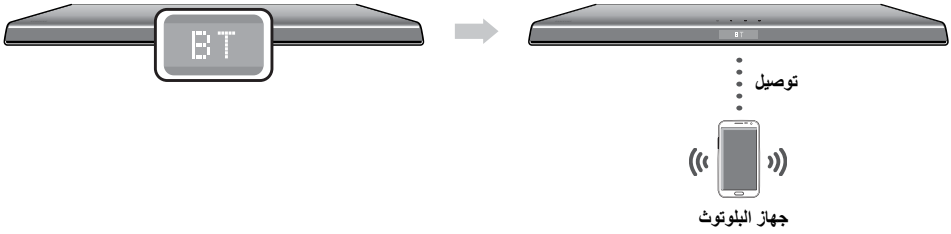

١. اضغط على زر **SOURCE** الموجود بوحدة التحكم عن بعد أو على زر (**F.**) الموجود على اللوحة الأمامية العلوية لعرض رسالة **BT**.

٢. اختر قائمة البلوتوث من جهاز البلوتوث الذي ترغب في توصيله. (راجع دليل المستخدم الخاص بجهاز البلوتوث.)

٣. اختر قائمة سماعة الاستريو في جهاز البلوتوث.

- ستظهر لك قائمة بالأجهزة التي تم العثور عليها.

٤. اختر **"SoundStand [Samsung]"** من القائمة.

- عند توصيل SoundStand بجهاز البلوتوث، سيعرض [اسم جهاز البلوتوث] ← **BT** على الشاشة الأمامية.
- يمكن عرض اسم الجهاز باللغة الإنجليزية فقط. سيتم عرض " _ " وتحته خط إذا لم يكن اسم الجهاز باللغة الإنجليزية.
- في حالة فشل جهاز البلوتوث في الاقتران بنظام SoundStand، قم بحذف **"SoundStand [Samsung]"** التي تم العثور عليها من قبل جهاز البلوتوث وقم بالبحث عن نظام SoundStand مرة أخرى.

٥. قم بتشغيل ملفات الموسيقى على الجهاز الذي تم توصيله.

- يمكنك الاستماع إلى الموسيقى على جهاز البلوتوث المتصل عبر نظام SoundStand.
- في وضع BT (البلوتوث)، لا تتوافر وظائف Play (التشغيل) / Pause (الإيقاف المؤقت) / Next (التالي) / Back (السابق). مع ذلك، تتوافر هذه الوظائف في أجهزة Bluetooth التي تدعم وظيفة (AVRCP).

- إذا طلب منك رقم PIN عند الاتصال بجهاز البلوتوث، أدخل <0000>.
- لا يمكن إقران أكثر من جهاز بلوتوث في نفس الوقت.
- سيتم إلغاء اتصال البلوتوث عند إيقاف نظام SoundStand.
- لا يمكن أن يُجري جهاز SoundStand البحث عن Bluetooth أو الاتصال بها بشكل صحيح تحت أي من الظروف التالية:
  - في حالة وجود مجال كهربي قوي حول نظام SoundStand.
  - في حالة إقران عدة أجهزة بلوتوث مع نظام SoundStand في نفس الوقت.
  - في حالة إيقاف تشغيل جهاز بلوتوث، عدم وضعه في المكان المناسب، أو وجود أعطال.
  - لاحظ أن أجهزة مثل أفران الميكروويف، محولات وصلات LAN اللاسلكية، مصابيح الفلوريسنت، وأفران الغاز تستخدم نفس نطاق التردد الذي يستخدمه جهاز البلوتوث، مما قد يتسبب في حدوث تداخل كهربي.
- يدعم نظام SoundStand بيانات SBC (٤٤,١ كيلو هرتز، ٤٨ كيلو هرتز).
- قم بالتوصيل فقط بجهاز بلوتوث يدعم وظيفة A2DP (الصوت والصورة).
- لا يمكنك توصيل جهاز SoundStand بجهاز Bluetooth يدعم فقط وظيفة HF (السماعة المنفصلة).

◄ Bluetooth POWER on (Bluetooth POWER)

عندما تكون وظيفة Bluetooth Power On (تشغيل Bluetooth) قيد التشغيل، ويكون جهاز SoundStand متوقفًا، إذا حاول جهاز Bluetooth سبق إقرانه الاقترانَ بجهاز SoundStand، يتم تشغيل SoundStand تلقائيًا.

١. اضغط على زر **Bluetooth POWER** على وحدة التحكم عن بُعد بجهاز SoundStand.

٢. تظهر وظيفة Bluetooth POWER (تشغيل Bluetooth) على شاشة SoundStand.

- تتوفر فقط إذا كان نظام SoundStand مدرج في قائمة الأجهزة المقترنة بجهاز البلوتوث. (يجب اقتران نظام SoundStand وجهاز البلوتوث لمرة واحدة على الأقل قبل ذلك الوقت.)
- سيظهر نظام SoundStand في قائمة البحث عن الأجهزة في جهاز البلوتوث فقط عندما يعرض نظام SoundStand رسالة [BT READY].
- في وضع SoundConnect TV، لا يمكن اقتران نظام SoundStand بجهاز بلوتوث آخر.
- إذا تم توصيل جهاز SoundStand بتلفزيون باستخدام وظيفة SoundConnect TV، وأوقفت تشغيل جهاز SoundStand بإيقاف تشغيل التلفزيون، فلن يتم تشغيل وظيفة Bluetooth Power (تشغيل Bluetooth) على SoundStand.

◄ لفصلجهاز البلوتوث من نظام SoundStand

يمكنك فصل جهاز البلوتوث من نظام SoundStand. للاطلاع على التعليمات، راجع دليل المستخدم الخاص بجهاز البلوتوث.

- سيتم فصل نظام SoundStand.
- عند فصل نظام SoundStand عن جهاز البلوتوث، ستظهر على شاشة نظام SoundStand رسالة **BT DISCONNECTED** على الشاشة الأمامية.

◄ لفصل نظام SoundStand عن جهاز البلوتوث

اضغط زر **SOURCE** الموجود بوحدة التحكم عن بعد أو على زر (**F.**) الموجود باللوحة الأمامية العلوية للتحويل من وضع **BT** إلى وضع آخر أو إيقاف تشغيل نظام SoundStand.

- سيستغرق جهاز البلوتوث المتصل مدة معينة حتى يستجيب لنظام SoundStand قبل فصل الاتصال. (ربما يختلف الوقت المطلوب لفصل الاتصال، وفقا لنوع جهاز البلوتوث)

- في وضع توصيل البلوتوث، سينقطع الاتصال بالبلوتوث في حال تخطت المسافة بين نظام SoundStand وجهاز البلوتوث ٥ أمتار.
- وفي حالة دخول جهاز البلوتوث مرة أخرى في نطاق التشغيل وإعادة الاتصال مرة أخرى بعد فصله، يمكنك إعادة التشغيل لاستعادة الاقتران مع جهاز البلوتوث.
- يتم إيقاف تشغيل نظام SoundStand تلقائيًا بعد ٢٥ دقيقة في حالة Ready (التأهب).

المزيد حول Bluetooth

يعتبر البلوتوث تقنية تتيح إمكانية ربط الأجهزة المتوافقة مع البلوتوث بسهولة مع بعضها البعض من خلال اتصال لاسلكي قصير المدى.

- ربما يتسبب جهاز البلوتوث في إحداث تشويش أو عطل، وفقًا للاستخدام، في حالة:
  - جزء من جسدك ملامسًا لنظام الاستقبال/الإرسال الخاص بجهاز البلوتوث أو نظام SoundStand.
  - يخضع الأمر للتردد الكهربي من العوائق الناتجة عن وجود حائط، زاوية، أو فواصل مكتبية.
  - التعرض لتداخل كهربي من أجهزة تستخدم نفس تردد النطاق بما في ذلك الأجهزة الطبية، أفران الميكروويف، ووصلات LAN اللاسلكية.
- قم بإقران نظام SoundStand مع جهاز البلوتوث عندما يكونان قريبين من بعضهما.
- كلما زادت المسافة بين نظام SoundStand وجهاز البلوتوث، كلما انخفضت الجودة.
  في حالة تخطي المسافة للنطاق التشغيلي للبلوتوث، ينقطع الاتصال.
- في المناطق التي تتسم بضعف حساسية الاستقبال، ربما لا يعمل البلوتوث بالشكل المناسب.
- يعمل اتصال البلوتوث فقط عندما يكون قريبًا من المجموعة. يتم قطع الاتصال تلقائيًا في حال تخطت المسافة هذا النطاق. حتى ضمن هذا النطاق، ربما تتأثر جودة الصوت بسبب العوائق المتمثلة في الحوائط أو الأبواب.
- ربما يتسبب الجهاز اللاسلكي في حدوث تداخل كهربي أثناء تشغيله.

ARA

NFC

يمكنك توصيل نظام SoundStand بجهاز ذكي يدعم وظيفة NFC من خلال اتصال البلوتوث بإعداد بسيط. وبمجرد التوصيل، يمكنك الاستمتاع بسماع ملفات الموسيقى المحفوظة في جهاز الذكي من خلال نظام SoundStand.

◄ التوصيل مع NFC والأجهزة الذكية

قم بتوصيل ملصق علامة NFC المطلوب، ثم قرّب جهازك الذكي إلى ملصق علامة NFC.

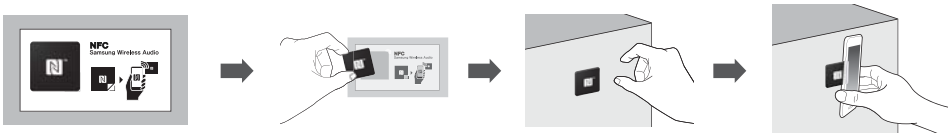

◄ التوصيل بـ NFC

١. انزع علامة NFC الموجود بالجزء العلوي من نظام SoundStand وضعه في النقطة التي تفضلها.
- ينصح بوضع ملصق NFC في نطاق نصف قطر يبلغ ٣ م من الوحدة.

٢. تشغيل وظيفة NFC في جهازك الذكي.

٣. قرّب هوائي NFC الخاص بجهازك الذكي من ملصق NFC.

٤. عند ظهور إشارة الاتصال على شاشة جهازك الذكي، حدد الخيار **<Yes>** (نعم).
- بمجرد اكتمال عملية الاتصال، تظهر رسالة الاكتمال.

◄ فصل وظيفة NFC

قرّب هوائي NFC الخاص بجهازك الذكي من ملصق NFC على نظام SoundStand مرة أخرى. وتظهر رسالة الفصل على شاشة الجهاز الذكي.

◄ لتوصيل جهاز ذكي آخر بنظام SoundStand المتصل بالفعل بجهاز آخر متوافق مع وظيفة NFC

بعد الفصل من الجهاز المتصل سابقًا، قرّب الجهاز الذكي الجديد من ملصق NFC بنظام SoundStand.

- تم تضمين وظيفة NFC في نظام التشغيل (Android v4.1.2 Jelly Bean) أو أنظمة التشغيل الأحدث.
  - لتوصيل NFC، يحتاج جهازك الذكي نظام التشغيل Android الإصدار Jelly Bean 4.1.2 أو أحدث وملف تعريف NFC لتشغيل وظيفة NFC. وتحتاج أيضًا إلى تنزيل تطبيق "Samsung NFC Connection" من متجر Google Playstore وتثبيته على جهازك الذكي. وللمزيد من التفاصيل، يرجى الاطلاع على دليل مستخدم الجهاز الذكي.
- موقع هوائي NFC يختلف من جهاز لآخر. ولذا، تأكد من موقع الهوائي بجهاز الذكي في دليل مستخدم الجهاز قبل محاولة إقرانه بنظام SoundStand.
- إذا كان جهازك الذكي داخل هيكل أو حافظة سميكة، فقد لا يكون اتصال NFC مستقرًا.
- العلامة (N) تعتبر علامة تجارية أو علامة تجارية مسجلة لشركة NFC Forum في الولايات المتحدة والدول الأخرى.
- إذا كنت تواجهة مشاكل في اتصال NFC
  - إن ملامسة جهازك الذكي لملصق NFC في واقع الأمر يمكن أن تتسبب في فشل اتصال NFC.
  - في حالة ظهور رسالة "Empty tag" على شاشة الجهاز الذكي، يرجى إعادة المحاولة.
  - تأكد مما إذا كان هوائي جهازك الذكي قريبًا من شعار NFC الموجود على نظام SoundStand.
- إذا قمت بإيقاف تشغيل نظام SoundStand عندما تكون وظيفة Bluetooth Power On (تشغيل Bluetooth) قيد التشغيل وحاولت بعد ذلك توصيل جهاز Bluetooth سبق توصيله باستخدام NFC، فسيعمل نظام SoundStand تلقائيًا عند توصيل الجهاز. ولضبط خيار Bluetooth Power On (تشغيل Bluetooth)، راجع الصفحة 16.

TV SOUNDCONNECT

يمكنك الاستمتاع بصوت التلفزيون من خلال توصيل نظام SoundStand بتلفزيون Samsung الذي يدعم وظيفة TV SoundConnect.

◄ توصيل التلفزيون بنظام SoundStand



١. قم بتشغيل التلفزيون ونظام SoundStand.
- اضبط قائمة إضافة جهاز جديد "Add New Device" في التلفزيون على وضع التشغيل "On".

٢. اضغط على الزر (**F.**) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع التلفزيون.

٣. بجهاز التلفزيون، ستظهر رسالة تسألك عما إذا كنت تريد تشغيل وظيفة TV SoundConnect. "[Samsung] SoundStand" على شاشة التلفزيون.

٤. حدد الخيار **<Yes>** لإتمام توصيل التلفزيون بنظام SoundStand.

- تحويل وضع نظام SoundStand من تلفزيون إلى آخر سيوقف تلقائيًا وظيفة TV SoundConnect.
- لتوصيل جهاز SoundStand بتلفزيون آخر، يجب إنهاء الاتصال الحالي.
- قم بإيقاف التوصيل بالتلفزيون الحالي، ثم اضغط على زر ►II الموجود بوحدة التحكم عن بعد لمدة 5 ثواني للتوصيل بجهاز تلفزيون آخر.

- وظيفة (SoundShare) TV SoundConnect مدعومة من بعض تلفزيونات Samsung ابتداءً من طراز عام 2012. تحقق مما إذا كان التلفزيون الذي تستخدمه يدعم وظيفة (SoundShare) TV SoundConnect قبل البدء. (للمزيد من التفاصيل، يرجى الرجوع إلى دليل المستخدم الخاص بجهاز التلفزيون.)
- إذا كان جهاز تلفزيون Samsung الخاص بك من طراز قبل عام 2014، راجع قائمة إعداد SoundShare.
- إذا كانت المسافة بين جهاز التلفزيون وجهاز SoundStand تزيد عن 5 أمتار، فقد لا يكون الاتصال مستقرًا أو قد يحدث تقطيع في الصوت. في حالة حدوث ذلك، قم بتغيير مكان التلفزيون أو جهاز SoundStand بحيث يصبحان في نطاق التشغيل، ثم أعد إنشاء الاتصال بوظيفة TV SoundConnect.

- نطاق تشغيل TV SoundConnect
  - نطاق الاقتران الموصى به: في نطاق ٥٠ سم
  - نطاق الاقتران الموصى به: في نطاق ٥ م
- الأزرار PLAY، NEXT، PREV و STOP لا تعمل في وضع TV SoundConnect.

◄ استخدام وظيفة Bluetooth POWER On

بعد توصيل التلفزيون وجهاز SoundStand باستخدام TV SoundConnect، إذا قمت بتشغيل وظيفة Bluetooth Power On (تشغيل Bluetooth)، فسيتم تشغيل جهاز SoundStand أو إيقاف تشغيله تلقائيًا عند تشغيل التلفزيون أو إيقاف تشغيله.

١. قم بتوصيل جهاز التلفزيون بنظام SoundStand الخاص بك من خلال وظيفة TV SoundConnect.

٢. اضغط على زر **Bluetooth POWER** على وحدة التحكم عن بُعد بجهاز SoundStand. تظهر وظيفة "BLUETOOTH POWER ON" على شاشة SoundStand.
- BLUETOOTH POWER ON : يتم تشغيل جهاز SoundStand وإيقاف تشغيله عند تشغيل التلفزيون أو إيقاف تشغيله.
- BLUETOOTH POWER OFF : يتم إيقاف تشغيل جهاز SoundStand فقط عند إيقاف تشغيل التلفزيون.

- هذه الوظيفة مدعومة فقط بواسطة بعض أجهزة التلفزيون التي أنتجتها Samsung اعتبارًا من عام 2013.
- إذا تم توصيل جهاز SoundStand بتلفزيون باستخدام وظيفة TV SoundConnect، وأوقفت تشغيل جهاز SoundStand بإيقاف تشغيل التلفزيون، فلن يتم تشغيل وظيفة Bluetooth Power (تشغيل Bluetooth) على SoundStand، حتى إذا قمت بتوصيل جهاز Bluetooth آخر به.

ARA

USB

يمكنك تشغيل ملفات الموسيقى الموجودة على أجهزة تخزين USB.

الشاشة

منفذ USB

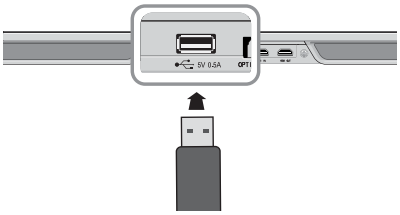

١. قم بتوصيل جهاز USB بمنفذ USB باللوحة الخلفية للمنتج.

٢. اضغط على زر **SOURCE** الموجود في وحدة التحكم عن بعد أو على زر (**F.**) الموجود على اللوحة العلوية حتى تظهر كلمة **USB**.

٣. تظهر كلمة **USB** على شاشة العرض.

- اكتمل توصيل جهاز SoundStand بجهاز USB.
- يتم إيقاف التشغيل تلقائيًا (Auto Power Off) في حالة عدم توصيل جهاز USB لمدة تزيد عن ٢٥ دقيقة.

◄ قبل قيامك بتوصيل جهاز USB

انتبه لما يلي:

- إذا كان اسم الملف بملف أو مجلد موجود على جهاز USB يزيد عن 10 أحرف، فلن يظهر على شاشة SoundStand.
- هذا المنتج ربما لا يكون متوافقًا مع بعض أنواع وسائط تخزين USB.
- أنظمة الملفات FAT16 و FAT32 مدعومة.
  - نظام الملفات NTFS غير مدعوم.
- قم بتوصيل جهاز USB مباشرة بمنفذ USB الخاص بالمنتج. خلافًا لذلك، ربما تصادف مشكلة في توافق USB.
- لا تقم بتوصيل عدة وحدات تخزين بالمنتج عبر قارئ بطاقات متعدد. فربما لا يعمل بشكل صحيح.
- بروتوكولات PTP الخاصة بالكاميرا الرقمية غير مدعومة.
- لا تقم بإزالة جهاز USB أثناء عملية القراءة.
- لن يتم تشغيل ملفات الموسيقى (بتنسيقي MP3 وWMA) المحمية بواسطة DRM المنزَّلة من المواقع الإلكترونية التجارية.
- محركات الأقراص الصلبة (HDDs) الخارجية غير مدعومة.
- أجهزة الهاتف المحمول غير مدعومة.

- قائمة التوافق

الصيغة	نظام الترميز
***.mp3**	MPEG 1 Layer2
	MPEG 1 Layer3
	MPEG 2 Layer3
	MPEG 2.5 Layer3
***.wma**	Wave_Format_MSAudio1
	Wave_Format_MSAudio2
***.aac**	AAC
	AAC-LC
	HE-AAC
***.wav**	-
***.ogg**	OGG 1.1.0
***.flac**	FLAC 1.1.0, FLAC 1.2.1

※ يدعم معدل عمل النماذج فوق ١٦ كيلوهرتز

تحديث برامج التشغيل

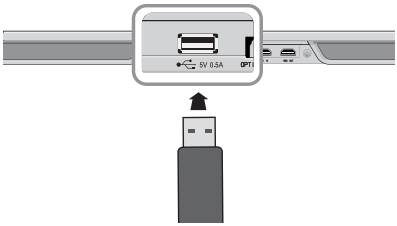

ربما تقوم شركة سامسونج في المستقبل بتوفير تحديثات للبرنامج الثابت الخاص بتشغيل نظام SoundStand.

عند توافر الترقية، يمكنك ترقية البرنامج الثابت من خلال توصيل محرك USB الذي يحتوي على الترقية بمنفذ USB الموجود بنظام SoundStand الخاص بك.

لاحظ أنه في حالة وجود عدة ملفات للترقية، يتعين عليك تحميل كل ملف بمفرده على محرك USB واستخدام ملف في كل مرة لتحديث البرنامج الثابت.

يرجى زيارة الموقع الإلكتروني (Samsung.com) أو الاتصال بمركز خدمة العملاء بشركة سامسونج للتعرف على المزيد من المعلومات المتعلقة بتنزيل ملفات التحديث.

- أدخل محرك USB الذي يحتوي على ترقية البرنامج الثابت بمنفذ USB الموجود بالوحدة الأساسية.
- يرجى عدم فصل التيار الكهربي أو إزالة محرك USB عندما تكون الترقيات قيد التطبيق. سيتم إيقاف تشغيل الوحدة الأساسية تلقائيًا بعد الانتهاء من تحديث البرنامج الثابت.
  عند ترقية البرامج، تتم إعادة تعيين جميع الإعدادات إلى إعدادات المصنع الافتراضية.
  نقترح تدوين الإعدادات الخاصة بك حتى يمكنك إعادة ضبطها بسهولة بعد الانتهاء من عملية التحديث.
- بمجرد اكتمال ترقية برنامج المنتج، قم بإيقاف تشغيل المنتج ثم اضغط مع الاستمرار على زر (▶II) لفترة وجيزة لإعادة ضبط المنتج.
- إذا فشل البرنامج الثابت في الترقية، فنوصي بتهيئة جهاز USB في FAT16 وإعادة المحاولة.
- لا تقم بتهيئة جهاز USB بتهيئة NTFS. لا يدعم جهاز SoundStand نظام ملفات NTFS.
- وفقًا لجهة التصنيع، ربما يكون محرك USB غير مدعومًا.

استكشاف الأعطال وإصلاحها

قبل طلب الخدمة، يرجى التأكد مما يلي.

لا يمكن تشغيل الوحدة.	
• هل تم توصيل سلك التيار الكهربي في منفذ التيار الكهربي؟	← قم بتوصيل قابس التيار الكهربي في المنفذ.

الوظيفة لا تعمل عند الضغط على الزر الخاص بها.	
• هل توجد شحنة كهرباء استاتيكية في الهواء؟	← افصل قابس التيار الكهربي وقم بتوصيله مرة أخرى.

الجهاز لا يصدر صوتًا.	
• هل قمت بتشغيل وظيفة كتم الصوت؟	← اضغط على زر Mute (كتم الصوت) لإيقاف تشغيل الوظيفة.
• هل تم ضبط مستوى الصوت على الحد الأدنى؟	← اضبط مستوى الصوت.

وحدة التحكم عن بعد لا تعمل.	
• هل يوجد ارتشاح بالبطاريات؟	← استخدم بطاريات جديدة.
• هل المسافة بين وحدة التحكم عن بعد والوحدة الأساسية كبيرة جدًا؟	← اقترب من الوحدة.

تعذر TV SoundConnect (اقتران التلفزيون).	
• هل جهاز التلفزيون الخاص بك يدعم TV SoundConnect؟	← وظيفة TV SoundConnect مدعومة من بعض طرازات تلفزيون Samsung المصنعة بعد عام 2012. افحص تلفزيونك للتأكد مما إذا كان يدعم TV SoundConnect.
• هل البرنامج الثابت الخاص بتلفزيونك أحدث إصدار؟	← قم بتحديث تلفزيونك بأحدث إصدارات البرنامج الثابت.
• هل يحدث خطأ عند التوصيل؟	← اتصل بمركز خدمة العملاء.
• أعد ضبط TV MODE (وضع TV) وقم بتوصيلها مرة أخرى.	← اضغط مع الاستمرار على زر ▶II لمدة ٥ ثواني لإعادة ضبط TV SoundConnect.

الملحق

المواصفات

اسم الطراز	HW-H600

عام	USB	٥ فولت/ ٠,٥ أمبير
	الوزن	٥ كجم
	الأبعاد (العرض × الارتفاع × العمق)	٧٣٥ x ٣٦,٥ x ٣٦٠ ملم
	درجة الحرارة المناسبة للتشغيل	من +٥ درجات مئوية إلى +٣٥ درجة مئوية
	درجة الرطوبة المناسبة للتشغيل	١٠ إلى ٧٥ ٪
المكبر	معدل طاقة الخرج	٨٠W (٨ OHM ,MID/TWT = ٤ OHM) (SW = التشويش التوافقي الكلي = ١٠٪، ١ كيلو هرتز
	نسبة الإشارة إلى الضجيج (الدخلالتناظري)	٦٥ ديسيبل
	الفاصل (1 كيلو هرتز)	٦٥ ديسيبل

* نسبة الإشارة إلى الضجيج، التشويش، الفاصل والحساسية القابلة للاستعمال تكون على أساس المعايير التي تستخدم توجيهات AES (جمعية الهندسة الصوتية).
* المواصفات الاسمية
  - تحتفظ شركة سامسونج إلكترونيكس المحدودة بالحق في تعديل المواصفات دون إخطار.
  - قيم الوزن والأبعاد تقريبية.
  - للاطلاع على مصدر الطاقة واستهلاك الطاقة، راجع الملصق المرفق مع المنتج.

الترخيص

مصنعة بترخيص من معامل Dolby Laboratories. Dolby ورمز D-double هي علامات تجارية مسجلة لمعامل Dolby Laboratories.

لبراءات اختراع (DTS) راجع الرابط http://patents.dts.com. صُنعت بترخيص من شركة DTS Licensing Limited. DTS، الرمز، و DTS والرمز معًا هي علامات تجارية مسجلة و DTS 2.0 Channel هي علامة تجارية خاصة بشركة DTS. المنتج يتضمن برامج التشغيل.

عبارات (HDMI) و (HDMI High-Definition Multimedia)، وشعار (HDMI) هي علامات تجارية أو علامات تجارية مسجلة لشركة (HDMI Licensing LLC) في الولايات المتحدة والدول الأخرى.

- لإرسال الاستفسارات والطلبات المتعلقة بالمصادر المفتوحة، يرجى الاتصال بشركة Samsung عبر البريد الإلكتروني (oss.request@samsung.com).

كشريك في برنامج ENERGY STAR، قررت Samsung أن يطابق هذا المنتج أو طرز المنتجات إرشادات برنامج ENERGY STAR لتوفير الطاقة.

الاتصال بسامسونج حول العالم

ذا كان لديك أيةاستفسارات أو ملاحظات تتعلق بمنتجات سامسونج، يرجى الاتصال بمركزخدمةالعملاء التابع لسامسونج.

المنطقة	مركز الاتصالات ☎	موقع الويب
Asia Pacific ▪		
AUSTRALIA	603 362 1300	www.samsung.com/au/support
NEW ZEALAND	(SAMSUNG (0800 726 786 0800	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	4698 3698 (852)	(www.samsung.com/hk/support (Chinese (www.samsung.com/hk_en/support (English
INDIA	Toll Free - 8282 3000 1800 Toll Free - 8282 266 1800 Non Toll Free - 30308282	www.samsung.com/in/support
INDONESIA	0800112888 021-56997777	www.samsung.com/id/support
JAPAN	0120-327-527	www.samsung.com/jp/support
MALAYSIA	1800-88-9999	www.samsung.com/my/support
PHILIPPINES	[PLDT] 1-800-10-7267864 [Globe landline and Mobile] 1-800-8-7267864 [Other landline] 02-4222111	www.samsung.com/ph/support
SINGAPORE	(1800-SAMSUNG (726-7864	www.samsung.com/sg/support
THAILAND	,0-2689-3232 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	889 588 1800	www.samsung.com/vn/support
MENA ▪		
U.A.E	(800-SAMSUNG (726-7864	(www.samsung.com/ae/support (English (www.samsung.com/ae_ar/support (Arabic
OMAN	(800-SAMSUNG (726-7864	
KUWAIT	(183-CALL) 183-2255	
BAHRAIN	8000-4726	
QATAR	(800-CALL) 800-2255	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	00 11 36 021	www.samsung.com/n_africa/support
PAKISTAN	(0800-Samsung (72678	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 5777444 06	(www.samsung.com/Levant/support (English
SYRIA	18252273	(www.samsung.com/Levant/support (English
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	2255 100 080	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support (www.samsung.com/sa_en/support (English
TURKEY	11 77 444	www.samsung.com/tr/support
Africa ▪		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
Ghana	0800-10077 0302-200077	
Cote D' Ivoire	0077 8000	www.samsung.com/africa_fr/support
SENEGAL	800-00-0077	
CAMEROON	0077 7095-	
KENYA	545 545 0800	www.samsung.com/support
UGANDA	300 300 0800	
TANZANIA	00 99 88 0685	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	(SAMSUNG (726 7864 0860	www.samsung.com/support
BOTSWANA	8007260000	
NAMIBIA	864 267 197 08	
ZAMBIA	350370 0211	
MOZAMBIQUE	827267864 / 847267864	